# TECHNICAL INFORMATION AND

SERVICE DATA



Model 532-MF

FIVE VALVE, TWO BAND, 32 VOLTS D.C. OPERATED SUPERHETERODYNE

ISSUED BY

AMALGAMATED WIRELESS (A'SIA) LTD.



# ELECTRICAL SPECIFICATIONS

### Frequency Ranges:

 Medium Wave
 540-1600 Kc/s (555-187.5M)

 Short Wave
 6-18 Mc/s (50-16M)

 Intermediate Frequency
 455 Kc/s

 Dial Lamps
 6.3 volts, 0.25 amp. M.E.S.

 Fuse
 3 amp. Cartridge

### Valve Complement:

- (1) 6BA6 R.F. Amplifier
- (2) 6BE6 Converter
- (3) 6BA6 I.F. Amplifier
- (4) 6AV6 Detector, A.F. Amplifier, A.V.C.
- (5) 6AQ5 Output

Loudspeaker (Permanent Magnet)

6½ inch - Code No. AG36

Transformer — XA1


V.C. Impedance - 3 ohms at 400 C.P.S.

Undistorted Power Output: 2.5 watts

# GENERAL DESCRIPTION

The model 532-MF is a 5 valve, two band, 32 volts D.C. operated superheterodyne.

Features of its design include: Tropic-proof construction, automatic volume control, magnetite cores in I.F. transformers and broadcast oscillator coil, air-dielectric trimming capacitors, straight-line edge lighted plastic dial scale.

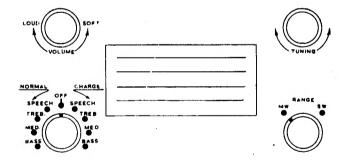

# ALIGNMENT PROCEDURE

## Manufacturer's Setting of Adjustments.

The receiver is tested by the manufacturer with precision instruments and all adjusting screws are sealed. Re-alignment should be necessary only when components in tuned circuits are repaired or replaced or when it is found that the seals over the adjusting screws have been broken.

It is especially important that the adjustments should not be altered unless in association with the correct testing instruments listed below.

Under no circumstances should the plates of the ganged tuning capacitor be bent, as the unit is accurately aligned during manufacture and cannot be readjusted unless by skilled operators using special equipment.

For all alignment operations, connect the low side of the signal generator to the receiver chassis, and keep the generator output as low as possible to avoid A.V.C. action. Also, keep the volume control in the maximum clockwise position.

### Testing Instruments.

- (1) A.W.A. Junior Signal Generator, type 2R3911, or
- (2) A.W.A. Modulated Oscillator, type J6726.

  If the modulated oscillator is used, connect a 0.25 megohm non-inductive resistor across the output terminals, and, for short wave alignment, an additional 400 ohms non-inductive resistor in series with the "high" output lead
- of the instrument.
  (3) A.W.A. Output Meter, type 2M8832.

### ALIGNMENT TABLE

Alignment Order	Connect "high" side of Generator to:	Tune Generator to:	Tune Receiver Dial to:	Adjust for Maximum Peak Output.
1	R.F. Section of Gang (centre portion)	455 Kc/s	540 Kc/s	L15 Core
. 2	R.F. Section of Gang (centre portion)	455 Kc/s	540 Kc/s	L14 Core
3	R.F. Section of Gang (centre portion)	455 Kc/s	540 Kc/s	L13 Core
4	R.F. Section of Gang (centre portion)	455 Kc/s	540 Kc/s	L12 Core
	Repeat the above adjustment	s until the maximum outp	out is obtained.	
5	Aerial Terminal	600 Kc/s	600 Kc/s	Osc. Core Adj. (L6)*
	Aerial Terminal	1500 Kc/s	1500 Kc/s	Osc. Adj. (C20)
6 7	Aerial Terminal	1500 Kc/s	1500 Kc/s	R.F. Adj. (C11)
8	Aerial Terminal	1500 Kc/s	1500 Kc/s	l Aer. Adj. (C5)
	Re	epeat adjustments 5, 6, 7	and 8.	
9	Aerial Terminal	16 Mc/s	16 Mc/s	Osc. Adj. (C22)**
10	Aerial Terminal	16 Mc/s	16 Mc/s	R.F. Adj. (C10)†
11	Aerial Terminal	16 Mc/s	16 Mc/s	Aer. Adj. (C8)†

<sup>\*</sup> Rock the tuning control back and forth through the signal.

### Connection to Power Supply.

The receiver will not operate unless it is connected to the power point in the correct polarity. It is necessary, therefore, that all power points to which the receiver may be connected are wired with the same polarity. The plug should be wired to the receiver power cable so that the red wire connects to the positive side of the supply and the black wire to the negative side.

A warning is given on the use of "Double Adaptors", which normally have one outlet in the reverse polarity to the other. If the use of a "Double Adaptor" is essential, the outlet with the correct polarity only should be used for the receiver.

### Interference Suppression.

If the receiver is in operation whilst the motor generator is running, some form of suppression will generally be necessary to reduce interference which is radiated from the generator and picked up by the receiver aerial.

It is recommended that the following be carried out:—To each generator brush connect one end of a 0.5  $\mu$ F capacitor. Then connect the other ends of the capacitors to the generator housing.

The generator housing should be earthed, using a wire as short as possible and of not less than 7/.029 insulated cable.

### Chassis Removal.

First remove the cabinet back. It is fastened to the cabinet body by four screws.

Then remove the control knobs by pulling them straight off their spindles.

The chassis is held in position by four screws through the base of the cabinet. Removal of these enables the chassis to be withdrawn from the cabinet.

When replacing the cabinet back, make sure that the power cord passes through the slot provided in the bottom of the cabinet back.

### Vibrator Cartridge Replacement.

Remove the chassis from the cabinet, the lid from the outer case of the vibrator unit and the lid from the inner case. The cartridge is then accessible.

### Vibrator Unit Removal.

Remove the chassis from the cabinet and remove the lid from the vibrator unit outer case. Beneath the chassis, disconnect three leads, red, yellow and black which come from the vibrator unit. The unit may then be lifted out of the case.

### Drive Cord Replacement.

Remove the dial frame assembly and follow the diagram which is affixed to the back. This shows the route of the cord and the method of attachment.

### Circuit Changes.

Since initial production several changes have been made to the circuit as follows:—

C50 (100  $\mu\mu$ F mica) was added and C43 was changed from .4  $\mu$ F 200V to .5  $\mu$ F 400V or 200V.

These changes improved "hash" filtering.

C42 (25  $\mu$ F 40 P.V.) was changed to 20  $\mu$ F 200 P.V. to prevent failure where high voltage (50 volts) occurs on some lighting plants. For the same reason R23 was changed from 5 ohms 25 watt to 10 ohms 25 watt.


In some chassis R22 is shunted by another resistor due to substitution of dial lamps of 0.32 amp, rating for those of 0.25 amp, rating.

In later models C1 and C23 were deleted, pin 2 of each 6BA6 socket being earthed, and the cathode resistors R1 and R6 changed to 200 ohms  $\frac{1}{2}$  watt.


In these models Pick-up terminals are provided in the form of pin jacks on the back of the chassis, the two left hand terminals being connected by a link for radio reception and with the link removed, the two right hand terminals may be used for pick-up connection. The right hand terminal is connected to the chassis and the centre terminal to the volume control R13.

<sup>\*\*</sup> Use minimum capacity peak if two can be obtained. Check to determine if C22 has been adjusted to correct peak by tuning the receiver to approximately 15.09 Mc/s where a weaker signal should be received.

<sup>†</sup> Use maximum capacity peak if two can be obtained.

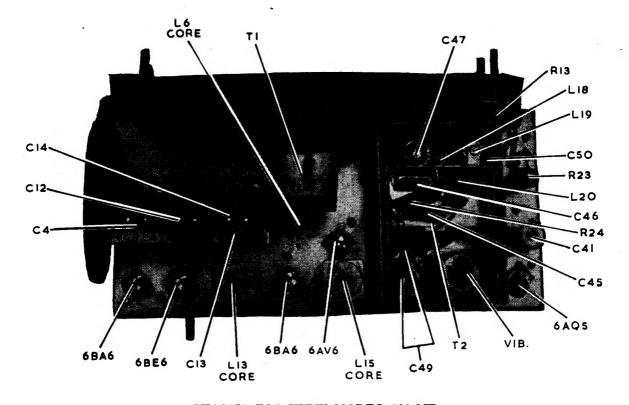

CHASSIS TOP VIEW MODEL 532-MF

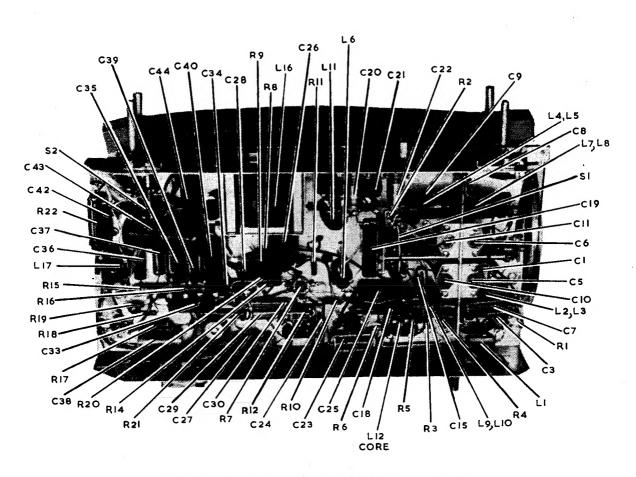

CHASSIS UNDERNEATH VIEW MODEL 532-MF

# CIRCUIT CODE RADIOLA 532-MF

Code No.	Description.	Part No.	Code No.	Description.		Part No.	Code No.	Description	Part No.
	SHOTOLIGIN		R20	1,000 ohms	:		33	100 μμF mica	
=	I.F. Filter (including C2)	9382	R21	160 ohms	5 ,, (wire wound)	•	<u> </u>	100 ppr silvered mica	
12, 13	Aerial Coil 540-1600 Kc/s	15454	R22	90 ohms	:	~ ^	C32	0.00 ref. silvered illica	
_	R.F. Coil 540-1600 Kc/s	23891	R23	10 ohms	:		38	200 une mica	
197	Oscillator Coil 540-1600 Kc/s	15949	R24	5 ohms	5 " (wire wound)	_	45	0.1 #F naper 400V working	
12, 18	Aerial Coil 6-18 Mc/s	15456		CAPACITORS			38	0.0025 #F paper 600V working	
19, 110	R.F. Coil 6-18 Mc/s	26060	7	Seidram VOOC	يموناء مريد		32	0.01 WF paper 600V working	
11	Oscillator Coil 6-18 Mc/s	26678	5 8	50 wif ellipsed mice	WOLKING		38	25 μF 40 P.V. electrolytic	
112, 113	1st I.F. Transformer	266/3	3 (	A CATE MICE	ę.		C39	0.005 μF paper 600V working	
114, 115	2nd I.F. Transformer	25197	3 5	12-430 auf tunion		18321	040	0.4 µF paper 200V working	
719	Filter Choke	15317	<b>5</b>	2-20 uuf sir trimmer	Je	19659	2.5	16 µF 525 P.V. electrolytic	
117	R.F. Choke	3149	3 8	2-20 44 air trimmer		19659	C42	20 $\mu F$ 200 P.V. electrolytic	
18	R.F. Choke	13809	3 8	0.05 uF paper 200V working			C43	0.5 $\mu$ F paper 400V working	
119	R.F. Choke	22930	) შ	O WIE mica			C44	0.1 $\mu F$ paper 400V working	
120	R.F. Choke	22936	3 8	0.05 4F paper 200V working	/ working		C45	0.1 µF paper 200V working	
			5	2-20 uuF air trimm	2.20 uuf air trimmer	19659	C46	$0.4~\mu F$ paper 200V working	
	RESISTORS		3 5	2.20 mile air trimmer	L	19659	C47	16 µF 525 P.V. electrolytic	
R1	400 ohms ½ watt		<u>.</u> :	12.430 ##F tunion		18321	C48	6	
R2	0.1 megohm 🛂 "		2 5	0 ""E mics	0 ""E mics		C49	1 $\mu$ F 400V working (2 x 0.5 $\mu$ F	
R3	20,000 ohms ½ ,,		33	12.430 ut tuning	12,430 uuF tuoing	18321		paper in parallel)	
R4	100 ohms ½ ,,		2 5	70 WE mice			C20	100 μμF mica	
R5	0.1 megohm ½ "		5 5	100 mile alternal main					
R6	400 ohms 🛂 "		<u>ء</u> و	100 ppg Silvered in	110			TRANSFORMERS	
R7	1 megohm 👍 "		);	100 ppr silvered mica	nca V storbing		I	Loudspeaker Transformer	
R8	20,000 ohms 1 ,,		8 C	0.03 µr paper 2000 working	• WOLKING		12	Vibrator Transformer	17894
R9	13,000 ohms 3 ,,		2 6	200 mil air trimmer		19659		937 8 38301701	
R10	1.5 megohms ½ "		35	4 000 une padder + 91%	+ 21%			LOUDSPEANER	AG36
R11	100 ohms ½ ,,		58	200 mr sir trimmer		19659		0½ remanent magnet	
R12	50,000 ohms 🛂 "		252	O 1 "E page 200V working	working			SWITCHES	
R13	0.5 megohm Volume Control	26442	3 8	Fo wif miss	n		5	Pance Switch	27084
R14	10 megohms 3 watt		C 5	50 phr mica	noi-king.		5 5	Tone-Power Switch	
R15	50,000 ohms 1 ,,		£ 53	o "E 626 D V electrolytic	trahetic		35		
R16	0.25 megohm 1 "		9 5	O 1 HE DODGE 400V Working	working			FUSES	
R17	250 ohms 3 ,, (wire wound)	<del>(</del> )	36	0.00 "F paper 400V working	/ working		Ε	3 amp. cartridge	
R18	50,000 ohms 🛂 ,,		8 8	100 wr mice	8		2	3 amp. cartridge	
R19	0.5 megohm ½ "		\$	ווווי שישי חוווים					